



INSTALLATION GUIDE

2000+ VW and Audi Sport Pedal Cover Set

Congratulations on your purchase of the AWE Tuning sport pedal covers set for VW and Audi vehicles.

Exquisite build quality and attractive design distinguishes this pedal kit from all others.

Contact us with any installation questions.

215-658-1670

AWE-Tuning.com

performance@AWE-Tuning.com

PARTS LIST

- 1 clutch pedal cover (optional finish)
- 1 brake pedal cover (optional finish)
- 1 accelerator pedal cover (optional finish)
- 1 clutch pedal adapter
- 9 1/2" long allen head bolt
- 2 3/8" long allen head bolt
- 1 1/8" allen key

Optional Accessory:

- 1 footrest cover (optional finish)
- 2 self tapping phillips head screws

Required tools:

- 1/8" drill bit
- 5/32" drill bit
- 10-32 tap
- T style tap holder
- Liquid thread locking compound
- Scribe
- Flat head screwdriver
- Phillips head screwdriver
- Drill
- WD-40
- Masking tape
- Fine felt tip pen

PLEASE NOTE: While our pedals have been tested under aggressive driving conditions, driving with hiking boots or extensive track use can work loose the rubber nubs from the metal pedal covers. If you intend to drive in these conditions, we recommend applying superglue to the back of each rubber nub before installing the covers.

Step 1

Remove floor mat. Pull off stock covers on clutch (where applicable) and brake pedals. Using a flat head screwdriver to pry underneath the covers will ease removal.

Step 2

Fold over strips of masking tape and place them on the back of the AWE Tuning clutch and brake covers. Stick the covers as desired on the factory clutch and brake pedals. Note that the AWE Tuning clutch and brake pedal covers on manual transmission cars will be taller than the factory pedals.

For VW Mk3, Mk4, and Audi TT:

Temporarily install the cover on the clutch pedal with the enclosed clutch pedal adapter (two holes) and the enclosed 3/8" long allen head bolts, as shown in **Figure 1**. The adapter plate is at the arrow in **Figure 1**.

When properly installed, the factory pedal is sandwiched between the cover and adapter.

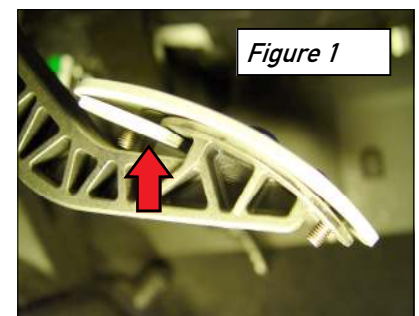


Figure 1

Step 3

Once you have verified that the pedal covers are where you desire them to be on the pedals, support each pedal from behind and carefully scribe the outline of the bolt hole openings for the covers onto the pedals.

Remove the covers and firmly mark a point at the center of each circle you have scribed, as shown in **Figure 2**. Make a firm mark, as this is where you will start your drill hole (pilot hole). A centerpunch works well for this purpose.



Temporarily place the AWE Tuning accelerator pedal cover in a position that allows sufficient foot space between the brake and accelerator pedal covers. Further ensure that the accelerator pedal cover is positioned so it does not hit the carpet when fully depressed.

Once you have verified position, repeat the same bolt hole marking procedure for the accelerator pedal cover (and the footrest cover if ordered). Outlining the bolt holes with a felt tip pen, instead of scribing, is easier to do on the factory plastic accelerator pedal and footrest.

Step 4

Holding your drill steady, drill a pilot hole at the center of each bolt hole outline with the 1/8" drill bit. Repeat with the 5/32" drill bit.

Be very careful to drill each hole at the same angle as that will ensure uniform appearance among the bolts after final install.

If you are having difficulty keeping your drill at a consistent angle to the pedals, especially the brake pedal, remove the knee bolster below the steering wheel to make room under the dash.

After drilling, tap each hole with the 10-32 tap. Use WD40 when drilling and tapping to make the job easier. **Do not tap the holes that were drilled for the footrest cover.**

Step 5

Apply thread locking compound to the 3/8" long and 1/2" long allen head bolts. Using the supplied 1/8" allen key, install the pedal covers with these allen head bolts. On Mk3, Mk4, and TT, install the clutch cover as shown in Step 2.

Using the phillips head screwdriver, install the optional footrest cover with the supplied self tapping screws.

Be sure not to over tighten the bolts for the accelerator, clutch, and footrest covers as the factory pedals and base are plastic.



ENJOY



Any questions or comments,
please do not hesitate to contact us:

1-888-565-2257
AWE-Tuning.com
performance@AWE-Tuning.com



AWE Tuning
199 Precision Drive
Horsham, PA 19044
215-658-1670
performance@AWE-Tuning.com

Thank you for choosing AWE Tuning as your performance automotive parts supplier. Please remember that a performance car is only as strong as its weakest link. Therefore, it is vital that you maintain your vehicle to factory specifications.

By installing or using the purchased product, the Consumer accepts this warranty and any specific Manufacturer warranties enclosed.

Limited Warranty

The following warranty is valid only in the United States.

The Manufacturer's full warranty applies to all products sold.

Secor Ltd. (AWE Tuning) warrants to the original retail purchaser (Consumer) this product (Sport Pedal Cover Set) against manufacturing defects for One Year.

Upon verification of warranty coverage, AWE Tuning will repair or replace the defective product at their discretion, without charge. This is the only remedy the Consumer has for any loss or damage, however arising, due to nonconformity in or defect of the product. This warranty does not cover consequential damage, loss of time or revenues, inconvenience, loss of use of vehicle, damage to the vehicle or components, shipping costs, or other incidental or indirect damage.

All warranties are void if the product was not installed by a certified auto mechanic, improperly serviced, modified, or used in a way not intended by the Manufacturer. Use of product in Motorsports or Racing conditions is grounds for warranty denial. Motorsports and Racing is an inherently abusive operational condition, and it is impossible to warranty for this type of usage.

The Consumer is responsible for ensuring that the product is installed in a safe and proper manner, and should cease usage of the product immediately if an unsafe or improper condition is noted. If an unsafe or improper condition is noted, the Consumer should then immediately contact the facility where the product was installed or AWE Tuning directly.

Please contact the original place of purchase for any warranty claims or explanations of this document.