



## **INSTALLATION GUIDE**

These instructions are intended for the following part numbers:  
**2660-13010, 2660-13012, 2660-13018**

**2009 Audi A4 3.2L  
2010-2016 Audi S4 3.0T  
2008-2010 Audi A5 Coupe 3.2L  
2008-2012 Audi S5 Coupe 4.2L  
2013-2017 Audi S5 Coupe 3.0T  
2010-2017 Audi S5 Cabriolet 3.0T  
S-FLO Intake**

Thank you for purchasing the **AWE S-FLO Intake.**

Exquisite build quality with industry leading performance distinguishes this intake kit from all others.

***Installation questions?***  
**CONTACT US**

# PARTS LIST



**INSPECT ALL PARTS PRIOR TO DISASSEMBLY OF VEHICLE; IF DAMAGED OR MISSING, PLEASE CONTACT THE PLACE OF PURCHASE IMMEDIATELY.**

## **S-FLO Intake Parts:**

- 1 AWE S-FLO air filter (GF4101)
- 1 AWE silicone intake hose (B8\_INT\_HOSE)
- 1 AWE fuel line bracket (cars up to 2012)
- 1 AWE EVAP line bracket (all cars)
- 1 M8 washer (93475A270)
- 1 8mm nut (91828A410)
- 2 M4 hex socket bolt (91292A122)
- 2 Panel mount cable ties (6686K21)
- 1 70-90 hose clamp (W053917090)
- 1 90-110 hose clamp (W0539190110)
- 1 Crimp clamp (W0541155)
- 1 CARB EO Identification Tag

## **Required Tools:**

- Flat tip screwdriver
- 13mm wrench
- T15, T25 Torx
- Wire cutters
- 3mm hex key

**B8\_INT\_HOSE**



**EVAP line bracket**



**Fuel line bracket**

**6686K21**



**GF4101**



**(W0539190110)**



**(W053917090)**

**93475A270**




**91828A410**

**(91292A122)**

## Step 1



Open the hood.

Disconnect the breather hose (located near the throttle body) from the factory intake hose.

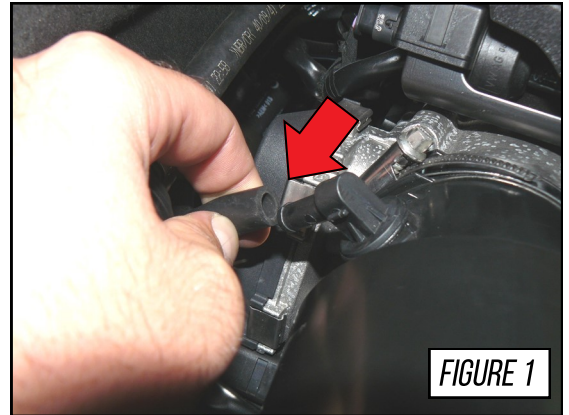



## Step 2

Unclip both rubber lines from the factory intake hose, shown by the arrows in **Figures 2-1 & 2-2**.

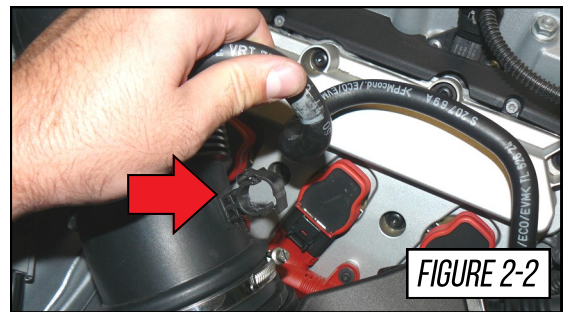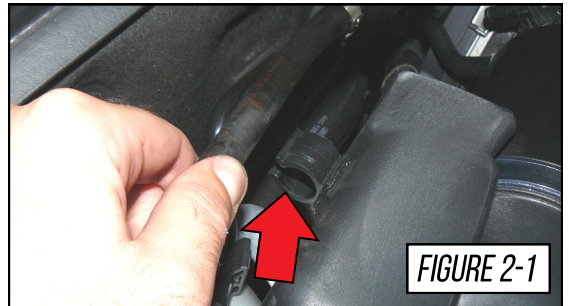

## STEP 3


Using a flat tip screwdriver, loosen the hose clamps holding the factory intake hose in place. Remove the factory intake hose.

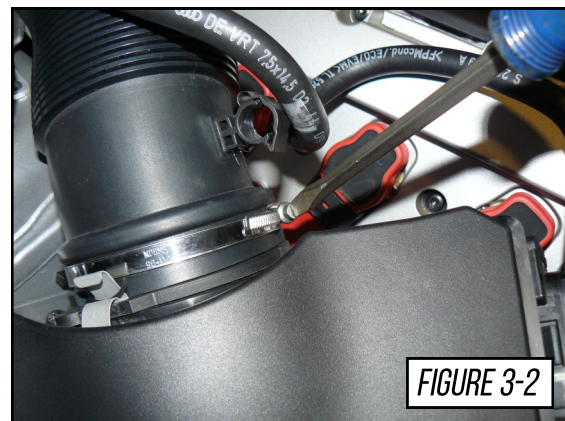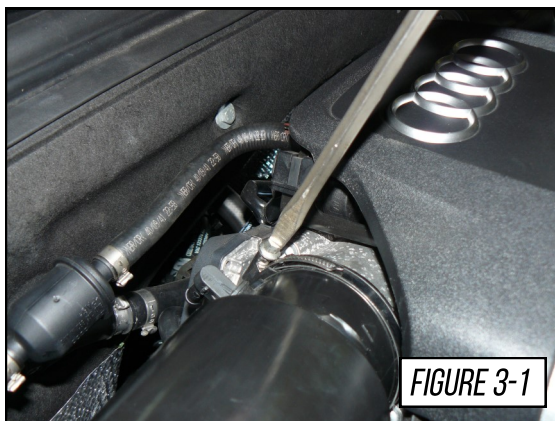



## STEP 4

Using a T25 Torx bit remove the air box lid and filter assembly.

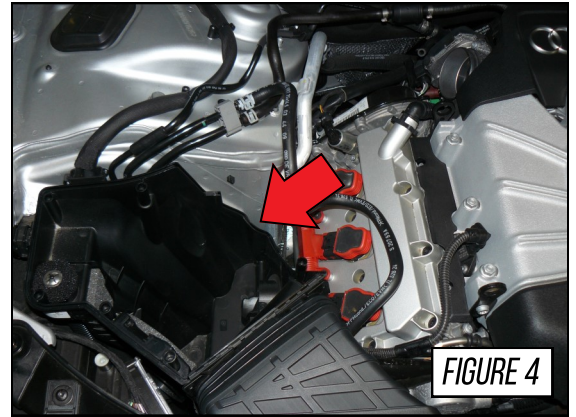


## STEP 5

Release the two metal clips holding the plastic hose collar to the lid.


Use a T15 Torx bit, remove the two screws securing the air filter element to the lid.

Remove and discard the large rubber o-ring beneath the air filter element.

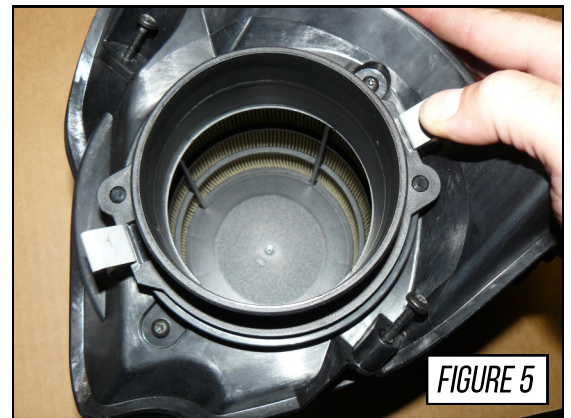


## STEP 6

Install the AWE S-FLO Filter into the air box lid by lining up the rubber bosses on the filter with the openings in the air box lid.

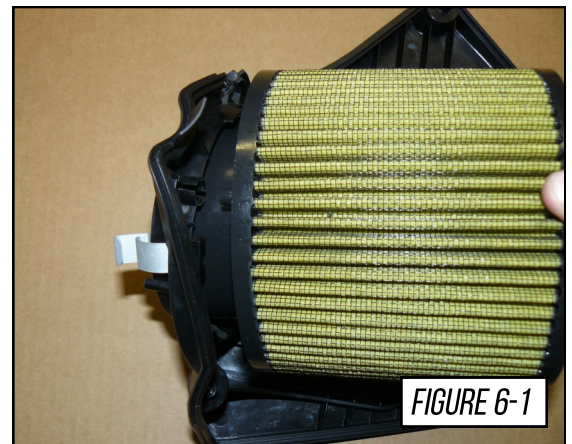

Use the supplied M4 bolts to secure the filter to the lid.

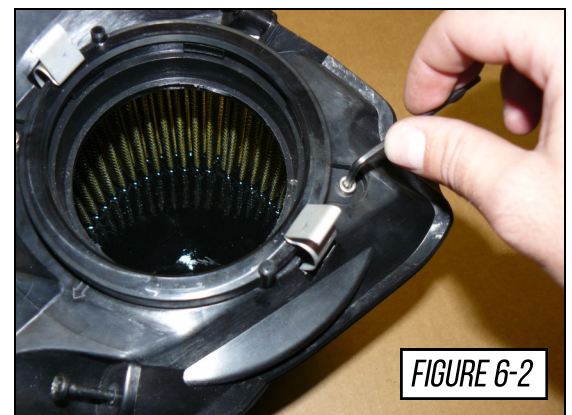


## STEP 7

Reinstall the plastic hose collar.

Reinstall the lid and filter assembly back in the car.


**For 2014 model year cars, please skip to Step 7.**

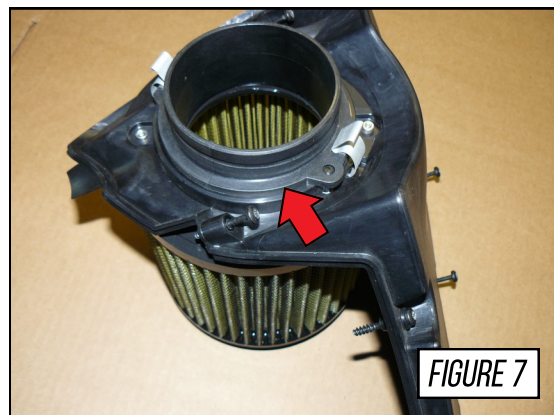

## STEP 8

**For cars up to 2013 model year:**


Install one of the included cable ties into the smaller of two holes on the EVAP line bracket as shown in **Figure 8**.

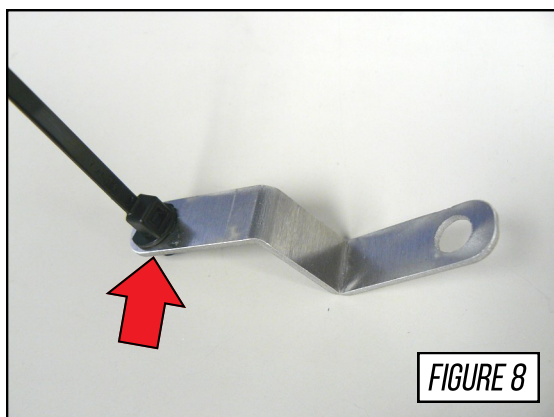

## STEP 9

Install the EVAP hose bracket on the existing passenger strut tower stud with the supplied M8 nut and washer. Secure the hose (at arrow in **Figure 9**) with the cable tie and trim as necessary.

**For 2013+ S4/S5, after installing this part, please skip to Step 12.**

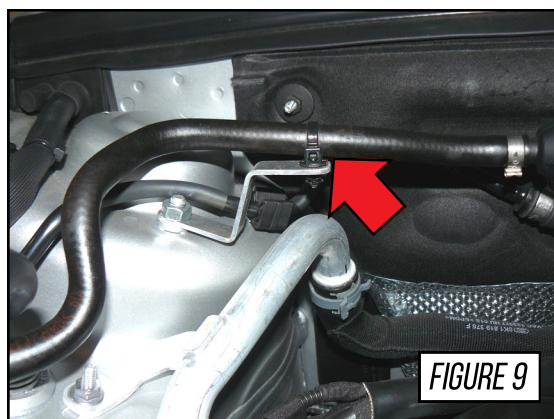

## STEP 10

**For cars up to 2012 model year:**


Install one of the included cable ties on the fuel line bracket, as shown at arrow in **Figure 10**.



## STEP 11

### ***For cars up to 2012 model year:***

Install the fuel line bracket under the air box lid bolt as shown in **Figure 11**. Secure the fuel line with the cable tie and trim as necessary.

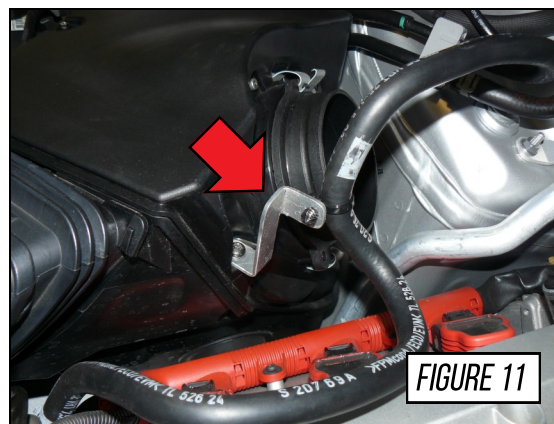

**FIGURE 11**

## STEP 12


### ***For all model year cars:***

Install the AWE silicone intake hose using the included hose clamps. Reinstall the factory breather hose on the plastic hose barb near the throttle body, as shown by the arrow in **Figure 12**.



**REMINDER:** Place the included CARB EO sticker in a clean, visible location. A good location would be in front of the intake, on the upper radiator cover.

***Installation is complete!***

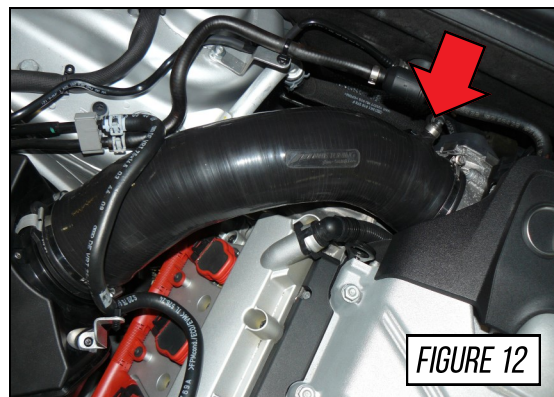

**FIGURE 12**

***ENJOY!***



## CARE

This is a re-usable air filter that can be cleaned when dirty and put back into service.

Please inspect the air filter element every 25,000 miles for integrity. Clean every 50,000 miles under normal operating conditions, sooner in dusty conditions.

Contact AWE to purchase a filter maintenance kit.

Any questions or comments,  
please do not hesitate to contact us:

**AWE**  
199 Precision Drive  
Horsham, PA 19044  
215-658-1670  
**CONTACT FORM**

## WARRANTY

Up-to-date warranty information is found [HERE](#).